

Bus-Scan® BS 300 Wiring Reference

Chrysler Town & Country

Model Years 2008-2010

BS 300 Function/Color	Vehicle Function/Color	Location
Power - Red	Constant Power – Connect to Battery	@ Battery Under Hood.
Ground - Black	Ground - Chassis	Various
Ignition - Brown	Ignition - Pink/White	@ Ignition Switch Harness
Horn - Yellow	Horn – Dark Green/Purple	@ Steering Column Harness
Horn Polarity - Green	Ground - Chassis	Various

Model Years 2004-2007

BS 300 Function/Color	Vehicle Function/Color	Location
Power - Red	Constant Power – Connect to Battery	@ Battery under hood.
Ground - Black	Ground - Chassis	Various
Ignition - Brown	Ignition – Pink/White	@ Ignition Switch Harness
Horn - Yellow	Horn – Black/Red	@ Steering Column Harness
Horn Polarity - Green	Ground - Chassis	Various

Model Years 2008-2010

BS 300 Function/Color	Vehicle Function/Color	Location
Power – Red.	Constant Power – Red(+) Connect to Battery.	@ Battery under hood.
Ground – Black.	Ground – Chassis.	Various.
Ignition – Brown.	Ignition – Pink/White.	@Wireless Ignition Node (WIN) on 12-Pin Plug.
Horn – Yellow.	Horn – Dark Green/Purple.	@ Horn Switch or Plug C3-Pin10.
Horn Polarity – Green.	Ground – Chassis.	Various.

Continued on next page...

Model Years 2011-2014

**DOES NOT USE VEHICLE HORN!
MUST USE OPTIONAL RTI SIREN (ORDER NUMBER 104533)**

BS 300 Function/Color	Vehicle Function/Color	Location
Power – Red.	Constant Power – Red(+) Connect to Battery.	@ BATTERY or UNDER HOOD FUSE BOX
Ground – Black.	Ground – Chassis.	Various.
Ignition – Brown.	Ignition – Pink/White.	@ IGNITION SWITCH, BLACK 12-PIN PLUG, PIN 3