


Bus-Scan 300 Drilling Template

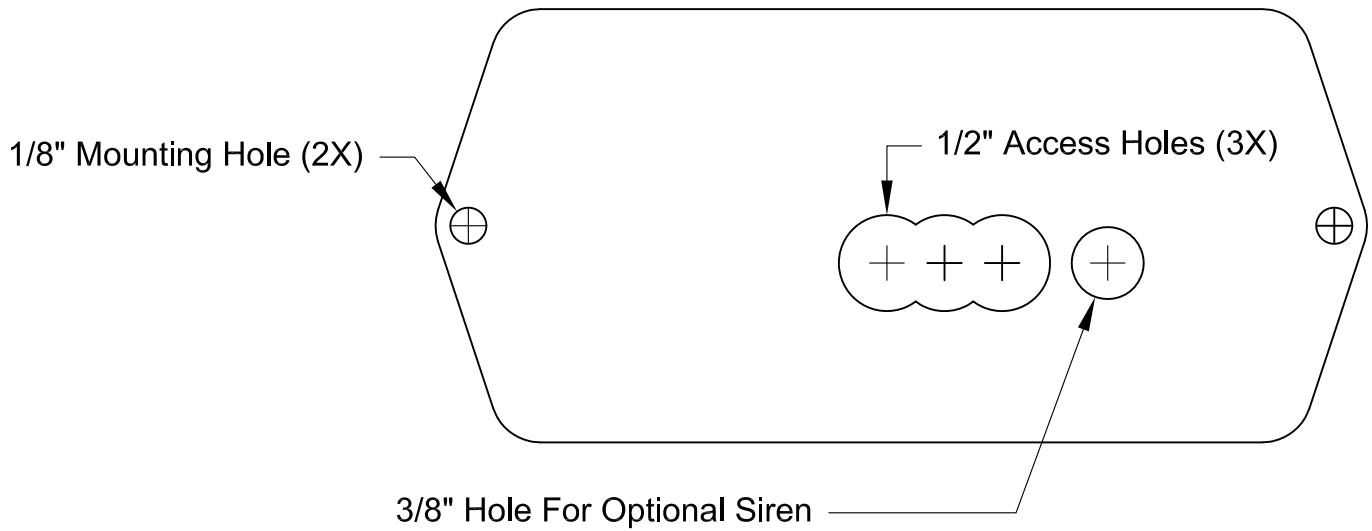


Step 1 Center Punch all Holes

Step 2 Using a 1/8" drill bit drill the 2 mounting holes along with the 3 1/2" access holes

Step 3 Using a 1/2" drill bit drill the 3 1/2" holes (Hint drill the outer 2 holes first)

Step 4 If you are using the optional siren drill the 3/8" hole

BS 100TX Drilling Template

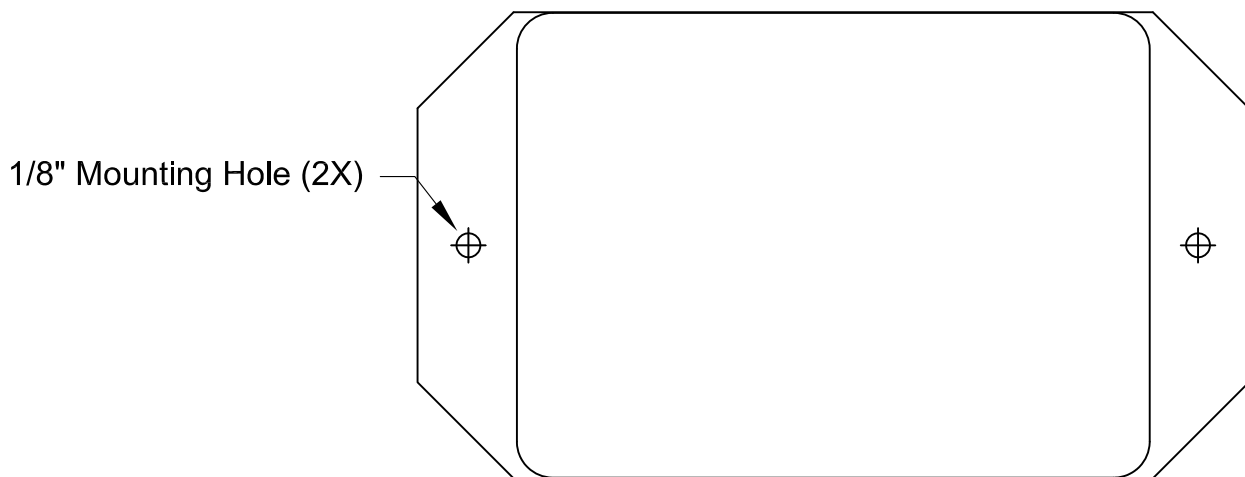

Step 1 Center Punch all Holes

Step 2 Using a 1/8" drill bit drill the 2 mounting holes