


Bus-Scan 300 C2 Light Control Module Wiring Instructions

Switch Hub Module

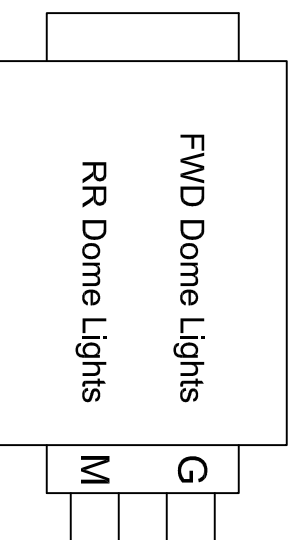

- 1) Locate the Switch Hub Module
- 2) Cut the feed wire on the Switch Hub Module (G for Forward lights M for Rear lights)
- 3) Connect the **Blue wire** to the **Switch Hub**
- 4) Connect the **Green wire** to the **Load** side of the cut wire
- 5) Connect the **Red wire** to a constant 12 volt source
- 6) Connect the **Black wire** to a Ground
- 7) Connect the **White wire** to the White wire on the Bus-Scan 300

Operation: When the ignition is turned off the interior lights will turn on. After the Bus-Scan has been disarmed the lights will shut off in 1 minute

