


# Bus-Scan 300 Light Control Module Wiring Instructions

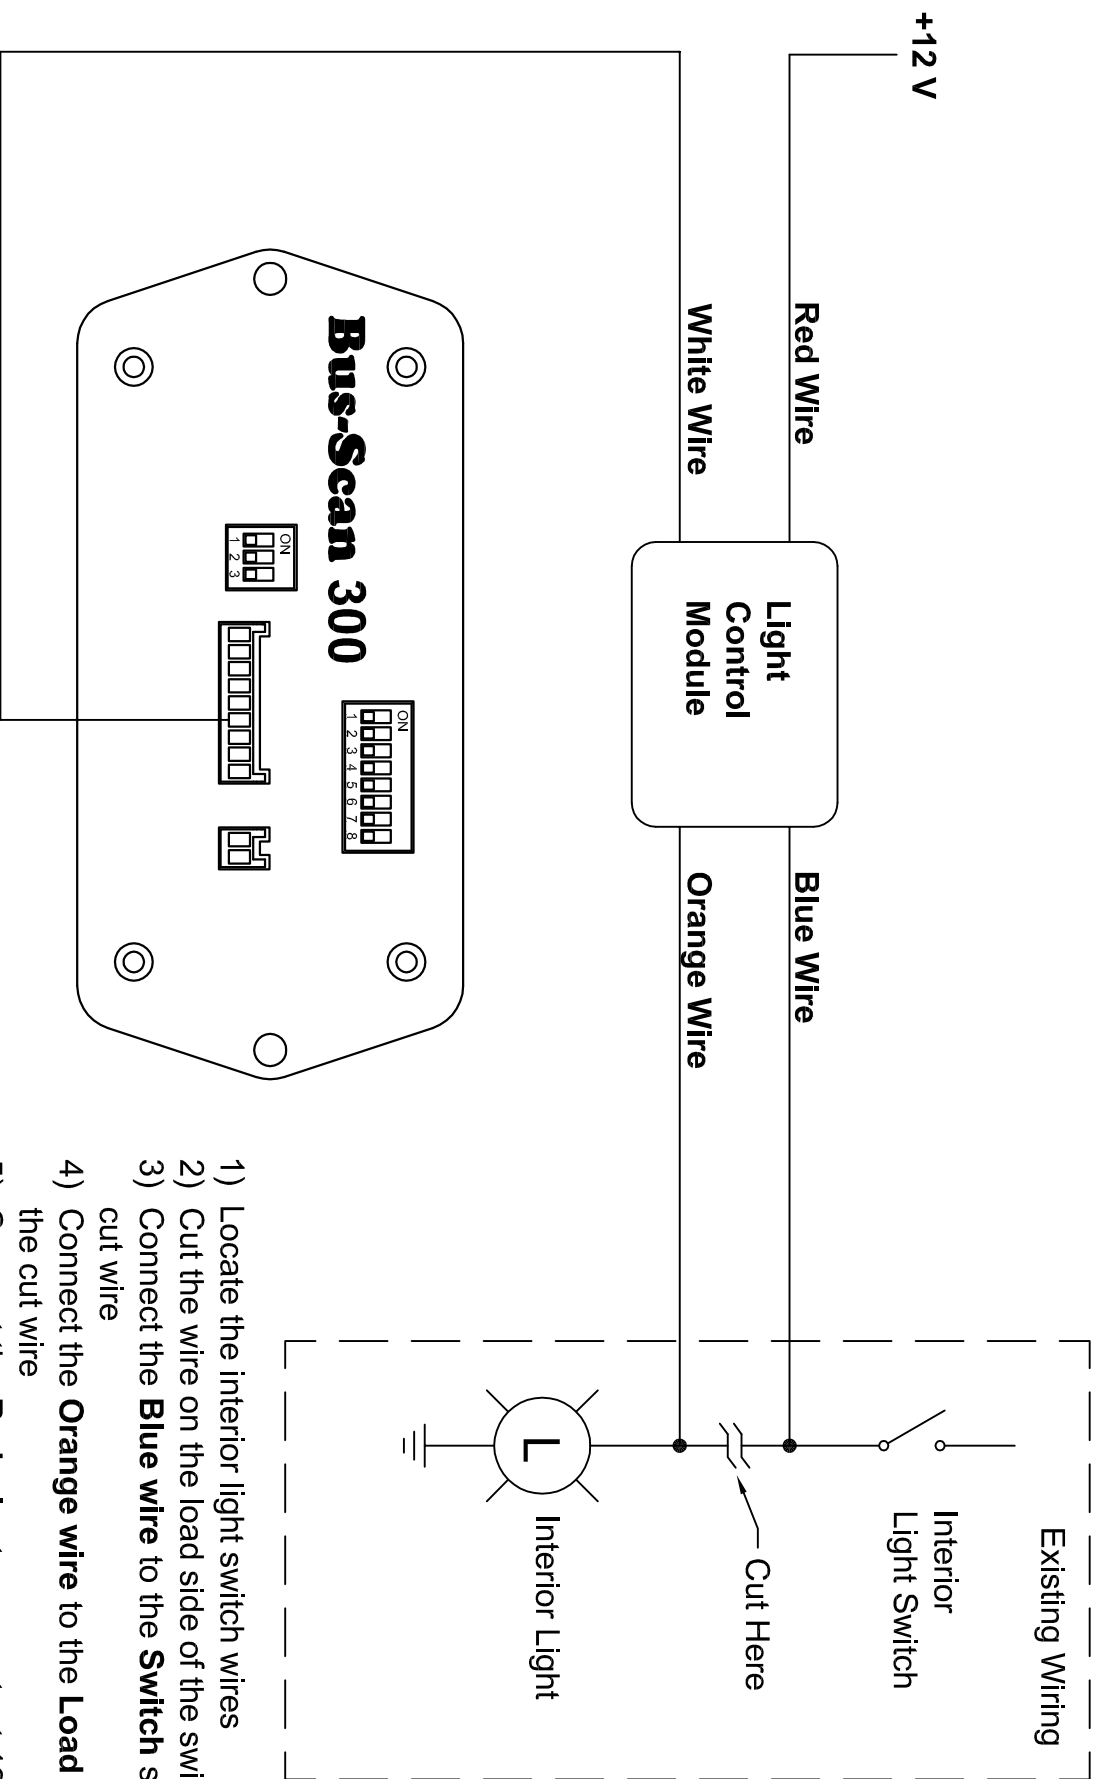

- 1) Locate the interior light switch wires
- 2) Cut the wire on the load side of the switch
- 3) Connect the **Blue wire** to the **Switch** side of the cut wire
- 4) Connect the **Orange wire** to the **Load** side of the cut wire
- 5) Connect the **Red wire** to a constant 12 volt source
- 6) Connect the **White wire** to the White wire in the Bus-Scan 300

**Operation:** When the ignition is turned off the interior lights will turn on. After the Bus-Scan has been disarmed the lights will shut off in 1 minute